
ESCOMAG MULTIMEDIA SOUNDKARTE (ESPOWER 2.7)

Card Type Chipset Controller I/O Options Maximum DRAM Sound card
Aztech AZTSB0792
Audio out, CD-ROM audio, game/MIDI port, line in, microphone in, volume

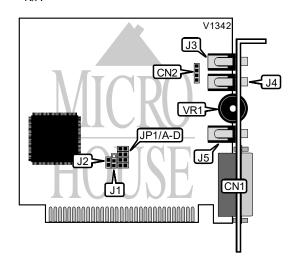

CONNECTIONS						
Purpos :	Location	Purpos ;	Location			
Game/MIDI port	CN1	Mic in	J4			
CD audio in	CN2	Audio out	J5			
Line in	J3	Volume	VR1			

BASE I/O ADDRESS SELECTION					
Address	J1				
í 220h	Pins 2 & 3 closed				
240h	Pins 1 & 2 closed				

GAME PORT CONFIGURATION				
Setting	J2			
Enabled	Open			
Disabled	Closed			

Continued next page...

ESCOMAG MULTIMEDIA SOUNDKARTE (ESPOWER 2.7)

. . . continued from previous page.

INTERRUPT SELECTION						
IRQ	JP1/A	JP1/B	JP1/C	JP1/D		
í 7	Open	Open	Open	Closed		
2	Closed	Open	Open	Open		
3	Open	Closed	Open	Open		
5	Open	Open	Closed	open		