


TANDY/RADIO SHACK DUAL DISPLAY GRAPHICS ADAPTER (250-3045)

| | |
|-------------------------------------|------------------------------|
| Card Type | Video card |
| Video Processor | 6845 |
| Data Bus | 8-bit ISA |
| Video Types Supported | Monochrome, CGA, Plantronics |
| Highest Resolution Supported | 720 x 348 |

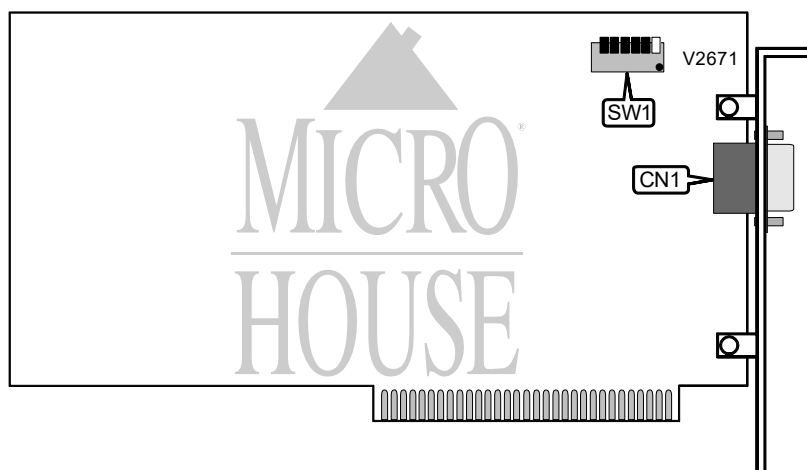

| CONNECTIONS | |
|---|-------|
| Function | Label |
| 9-pin video out connector | CN1 |
| Note: An RCA jack for composite video modes is provided on an included adapter cable. | |

| USER CONFIGURABLE SETTINGS | | |
|-------------------------------------|-------|----------|
| Setting | Label | Position |
| í Factory configured - do not alter | SW1/6 | On |

| VIDEO MODE SELECTION | | | | | |
|---------------------------------------|-------|-------|-------|-------|-------|
| Setting | SW1/1 | SW1/2 | SW1/3 | SW1/4 | SW1/5 |
| í Emulate color on monochrome monitor | On | On | Off | On | On |
| Monochrome mode | Off | On | Off | On | On |
| Color mode | On | Off | Off | On | On |
| Composite color mode | On | Off | On | Off | Off |
| Composite monochrome mode | On | Off | On | Off | On |