ACER, INC.
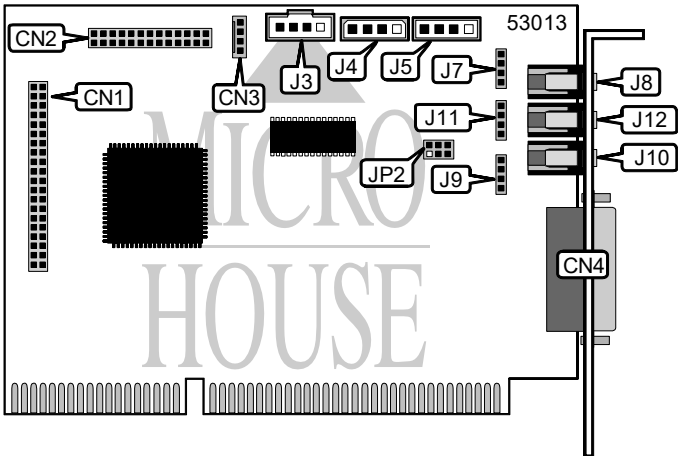# S629

Card Type	Sound card
Chip Set	Unidentified
I/O Options	CD-ROM ATAPI interface, game/MIDI port, microphone in (2), line in (2), speak/line out (2), CD-audio in (3), wavetable
Data Bus	16-bit ISA

CONNECTIONS			
Function	Label	Function	Label
ATAPI CD-ROM connector	CN1	Line in (internal)	J7
Wavetable connector	CN2	Line in (external)	J8
Mono in	CN3	Line/speak out (internal)	J9
Game/MIDI port	CN4	Line/speak out (external)	J10
Audio in CD-ROM (Sony)	J3	Microphone (internal)	J11
Audio in CD-ROM (Creative)	J4	Microphone jack	J12
Audio in CD-ROM (Mitsumi)	J5		

USER CONFIGURABLE SETTINGS		
Function	Label	Position
í Speak out	JP2	Pins 3 & 5, 4 & 6 closed
Line out	JP2	Pins 1 & 3, 2 & 4 closed