


# U.S. ROBOTICS, INC. SPORTSTER 9600/PC, SPORTSTER 9600/PC FAX

<b>Card Type</b>	Modem (asynchronous)
<b>Chipset</b>	U.S. Robotics, Inc.
<b>Maximum Data Rate</b>	9600bps
<b>Maximum Fax Rate</b>	9600bps (fax model only)
<b>Data Modulation</b>	Bell 103A/212A ITU-T V.21, V.22, V.22bis, V.23, V.32
<b>Fax Modulation</b>	ITU-T V.21CH2, V.27ter, V.29 (fax model only)
<b>Error Correction/Compression</b>	MNP5, V.42, V.42bis
<b>Fax Class</b>	Class I (fax model only)
<b>Data Bus</b>	8-bit ISA
<b>Card Size</b>	Full height, one-third length

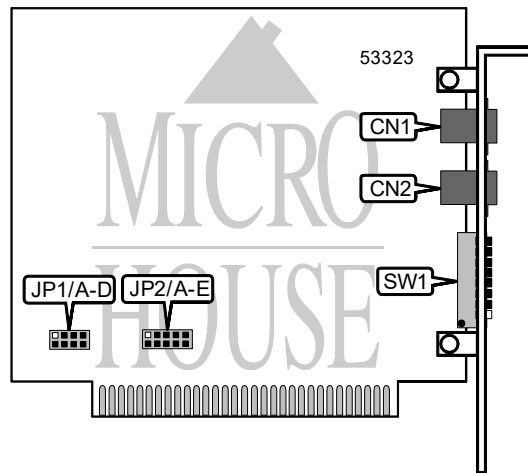

CONNECTIONS			
Function	Label	Function	Label
Telephone line out	CN1	Telephone line in	CN2

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
<input type="checkbox"/> DTR normal	SW1/1	Off
<input type="checkbox"/> DTR forced high	SW1/1	On
<input type="checkbox"/> Modem sends verbose result codes	SW1/2	Off
<input type="checkbox"/> Modem sends numeric result codes	SW1/2	On
<input type="checkbox"/> Result codes enabled	SW1/3	On
<input type="checkbox"/> Result codes disabled	SW1/3	Off
<input type="checkbox"/> Command mode echo enabled	SW1/4	Off
<input type="checkbox"/> Command mode echo disabled	SW1/4	On
<input type="checkbox"/> Auto-answer disabled	SW1/5	On
<input type="checkbox"/> Auto-answer controlled by S0	SW1/5	Off
<input type="checkbox"/> DCD normal	SW1/6	Off
<input type="checkbox"/> DCD forced high	SW1/6	On

Continued on next page. . .

U.S. ROBOTICS, INC.

SPORTSTER 9600/PC, SPORTSTER 9600/PC FAX

... continued from previous page

USER CONFIGURABLE SETTINGS (CONT)		
Setting	Label	Position
i Load settings from profile specified by Y command	SW1/7	Off
Load settings from factory defaults	SW1/7	On
i Command set enabled	SW1/8	On
Command set disabled	SW1/8	Off

SERIAL PORT ADDRESS SELECTION				
Setting	JP1/A	JP1/B	JP1/C	JP1/D
3F8h (COM1:)	Closed	Open	Open	Open
2E8h (COM2:)	Open	Closed	Open	Open
3F8h (COM3:)	Open	Open	Closed	Open
2E8h (COM4:)	Open	Open	Open	Closed

INTERRUPT SELECTION					
Setting	JP2/A	JP2/B	JP2/C	JP2/D	JP2/E
2	Closed	Open	Open	Open	Open
3	Open	Closed	Open	Open	Open
4	Open	Open	Closed	Open	Open
5	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Closed

SUPPORTED STANDARD COMMANDS
<b>Basic AT Commands</b>
+++ , 'comma', A/
A, B, D, E, H, L, M, O, V, X, Z
&C, &D, &F, &G, &P, &R, &S, &T, &W
<b>S-Registers</b>
S0, S1, S2, S3, S4, S5, S6, S7, S8, S9, S10, S11, S12, S18, S25, S38
Note: See MHI help file for complete information.

## Proprietary AT Command Set

See U.S. ROBOTICS, INC. SPORTSTER 14,400/PC for a full command summary.