


# CREATIVE LABS, INC. 16-BIT AUDIO CARD (MIDI VER.2)

Card Type	Sound card
Chip Set	Unidentified
Maximum Onboard Memory	Unidentified
I/O Options	Game/MIDI port, CD-ROM audio in , microphone in, line in, line out, speaker out, wavetable connector, PC speaker connector
Data Bus	16-bit ISA

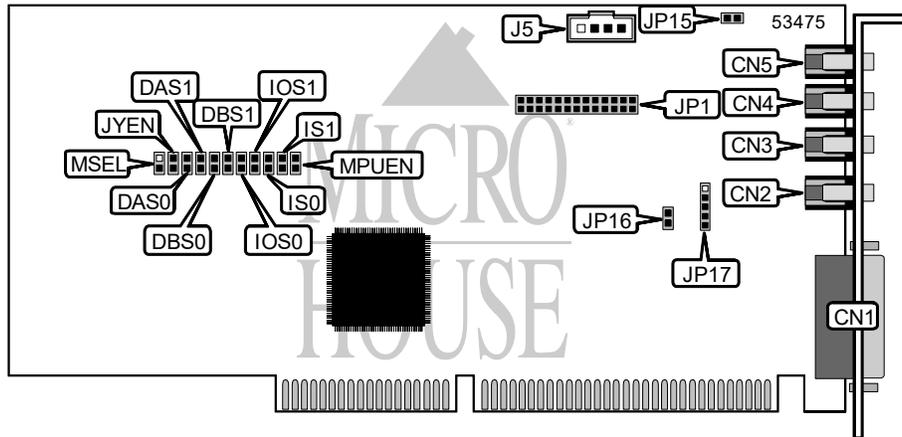

CONNECTIONS				
Function		Label	Function	
Game/MIDI port		CN1	Audio in - CD-ROM	
Speaker out		CN2	Wavetable connector	
Line out		CN3	PC Speaker connector	
Microphone in		CN4	Unidentified	
Line in		CN5	Unidentified	
			J5	
			JP1	
			JP15	
			JP16	
			JP17	

USER CONFIGURABLE SETTINGS			
Function		Label	Position
i MPU I/O address 330h		MSEL	Closed
MPU I/O address 300h		MSEL	Open
i MPU-401 enabled		MPUEN	Closed
MPU-401 disabled		MPUEN	Open
i Joystick enabled		JYEN	Closed
Joystick disabled		JYEN	Open

BASE I/O ADDRESS			
Setting	IOS0		IOS1
i 220h	Closed		Closed
240h	Closed		Open
260h	Open		Closed
280h	Open		Open

Continued on next page . . .

CREATIVE LABS, INC.  
 16-BIT AUDIO CARD (MIDI VER.2)

. . . continued from previous page

LOW DMA CHANNEL SELECTION		
Setting	DAS0	DAS1
DMA 0	Closed	Closed
iDMA 1	Open	Closed
DMA 3	Closed	Open
Disabled	Open	Open

HIGH DMA CHANNEL SELECTION		
Setting	DBS0	DBS1
iDMA 5	Closed	Closed
DMA 6	Open	Closed
DMA 7	Closed	Open
Low DMA enabled	Open	Open

INTERRUPT SELECTION		
IRQ	IS0	IS1
2	Closed	Closed
i 5	Closed	Open
7	Open	Closed
10	Open	Open