U.S. ROBOTICS, INC. SPORTSTER 56K VOICE FAXMODEM (INTERNAL)

Card TypeModem (asynchronous)ChipsetU.S. Robotics, Inc.

I/O Options Voice, speakerphone, microphone in, speaker out

Maximum Data Rate56KbpsMaximum Fax Rate14.4KbpsData ModulationBell 103A/212A

ITU-T V.21, V.22, V.22bis, V.23, V.32, V.32bis, V.34

U.S. Robotics x2


Fax Modulation ITU-T V.17, V.21CH2, V.27ter, V.29

Error MNP5, V.42, V.42bis

Correction/Compression

Fax Class I & II
Data Bus 8-bit ISA

Card Size Full height, one-third length

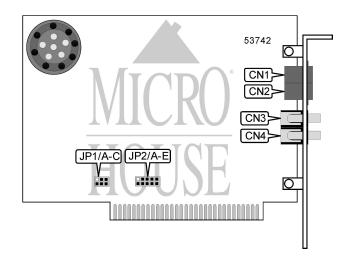

	CONNE	CTIONS	
Function	Label	Function	Label
Telephone line out	CN1	Microphone in	CN3
Telephone line in	CN2	Speaker out	CN4

USER CONFIGURABLE SETTINGS			
Setting	Label	Position	
í Plug-N-Play disabled	JP1/C	Closed	
Plug-N-Play enabled	JP1/C	Open	
Note: For Plug-N-Play to be enabled, JP1/A-B and JP2/A-E must be set to open.			

SERIAL PORT ADDRESS SELECTION				
Setting	JP1/A	JP1/B		
3F8h (COM1:)	Closed	Closed		
í 2E8h (COM2:)	Open	Closed		
3F8h (COM3:)	Closed	Open		
2E8h (COM4:)	Open	Open		
Plug-N-Play	Open	Open		

U.S. ROBOTICS, INC. SPORTSTER 56K VOICE FAXMODEM (INTERNAL)

. . . continued from previous page

		INTERRUPT	SELECTION		
Setting	JP2/A	JP2/B	JP2/C	JP2/D	JP2/E
2	Closed	Open	Open	Open	Open
í 3	Open	Closed	Open	Open	Open
4	Open	Open	Closed	Open	Open
5	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Closed
Plug-N-Play	Open	Open	Open	Open	Open

SUPPORTED STANDARD COMMANDS		
Basic AT Commands		
+++, 'comma', A/		
A, B, D, E, F, H, L, M, O, P, T, V, X, Z		
&C, &D, &F, &G, &P, &R, &S, &T, &W		
S-Registers		
S0, S1, S2, S3, S4, S5, S6, S7, S8, S9, S10, S11, S12, S18, S25, S38		
Note: See MHI help file for complete information.		

Proprietary AT Command Set

See U.S. ROBOTICS SPORTSTER 56K FAXMODEM (INTERNAL) for a full command summary.