


TANDY/RADIO SHACK CDR-1100 INTERFACE BOARD

Card Type	Multi-I/O card
Chip Set	Unidentified
I/O Options	CD-ROM interface, audio line out/right, audio line out/left, audio in - CD-ROM
Data Bus	8-bit ISA
Card Size	Half-length, half-height card

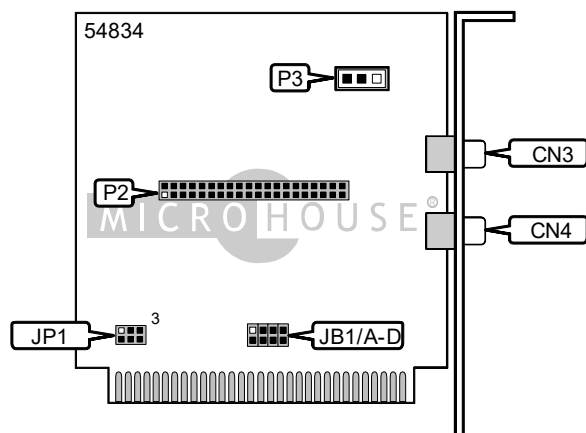

CONNECTIONS			
Function	Label	Function	Label
Audio line out/right	CN3	CD-ROM interface	P2
Audio line out/left	CN4	Audio in - CD-ROM	P3

BUS ADDRESS	
Address	JP1
300h	Pins 1 & 2, 4 & 5 closed
310h	Pins 2 & 3, 4 & 5 closed
330h	Pins 1 & 2, 5 & 6 closed
340h	Pins 2 & 3, 5 & 6 closed

IRQ SETTINGS				
IRQ	JB1/A	JB1/B	JB1/C	JB1/D
3	Closed	Open	Open	Open
4	Open	Closed	Open	Open
5	Open	Open	Closed	Open
6	Open	Open	Open	Closed

TECHNICAL NOTE	
Note: Only use this card with the CDR-1100 (250-1092/259-1092) CD-ROM drive.	