IBM CORPORATION

NETFINITY SERVERAID 3H ULTRA2

Card Type	Hard drive controller
Chip Set	Unidentified
Maximum Onboard Memory	32MB DRAM
I/O Options	SCSI connector (3), LED connector, DASD status connector, game port, serial port
Hard Drives supported	Up to 45 Wide SCSI-2 or Ultra-wide SCSI devices
Floppy drives supported	None
Data Bus	64-bit PCI
Card Size	Full-length/full height card
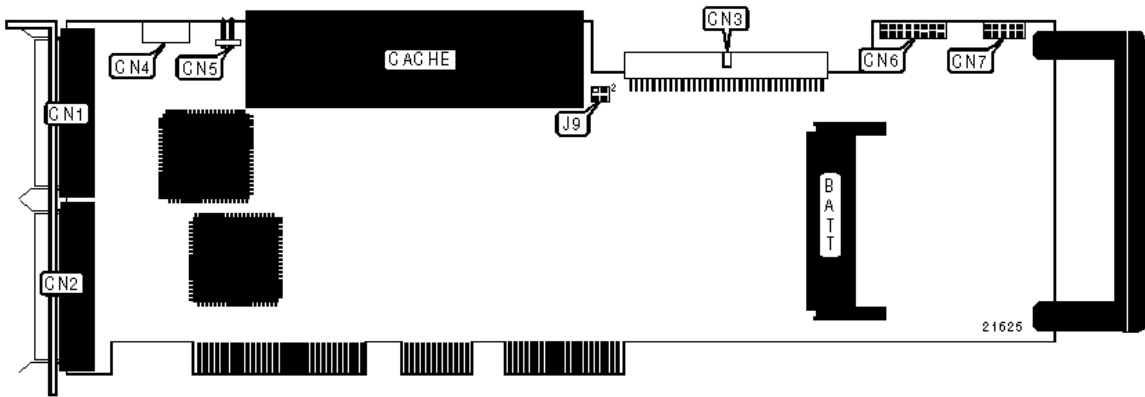
CONNECTIONS

Function	Label	Function	Label
Battery back-up cache connector	BATT	DASD status connector	CN4
68-pin SCSI connector Ch. 2 - external	CN1	2-pin connector - drive active LED	CN5
68-pin SCSI connector Ch. 1 - external	CN2	16-pin game connector	CN6
68-pin SCSI connector Ch. 3 - internal	CN3	10-pin serial connector	CN7

DOWNLOAD VIA BOOTBLOCK

Function	J6
» Download via bootblock disabled	Open
Download via bootblock enabled	Pins 1 & 2, 3 & 4 closed
Download via bootblock enabled (secondary option)	Pins 1 & 3, 2 & 4 closed

Note: Jumpers should only be installed if download by code block fails