STANDARD MICROSYSTEMS CORPORATION
ARCnet PC270E

NIC Type	ARCnet
Transfer Rate	2.5Mbps
Data Bus	8-bit ISA
Topology	Star
	Linear Bus
Wiring Type	Unshielded twisted pair
Boot ROM	Available
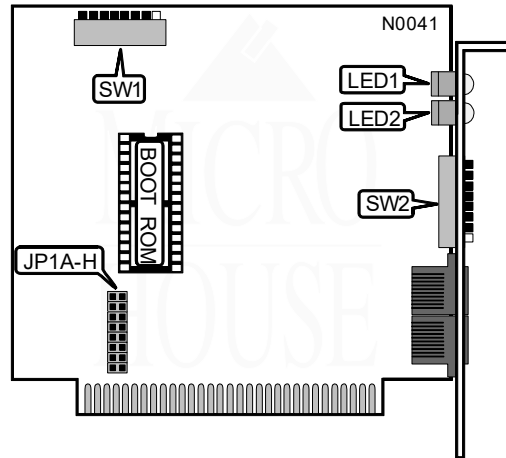
NODE ADDRESS								
Node	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
0	-	-	-	-	-	-	-	-
1	Off	On	On	On	On	On	On	On
2	On	Off	On	On	On	On	On	On
3	Off	Off	On	On	On	On	On	On
4	On	On	Off	On	On	On	On	On
251	Off	Off	On	Off	Off	Off	Off	Off
252	On	On	Off	Off	Off	Off	Off	Off
253	Off	On	Off	Off	Off	Off	Off	Off
254	On	Off	Off	Off	Off	Off	Off	Off
255	Off	Off	Off	Off	Off	Off	Off	Off
Note: Note address 0 is used for messaging between nodes and must not be used. A total of 255 node address settings are available. The switches are a binary representation of the decimal node addresses. Switch 1 is the Least Significant Bit and switch 8 is the Most Significant Bit. The switches have the following decimal values: switch 1=1, 2=2, 3=4, 4=8, 5=16, 6=32 7=64, 8=128. Turn off the switches and add the values of the off switches to obtain the correct node address. (On=0, Off=1)								

STANDARD MICROSYSTEMS CORPORATION
A R C n e t P C 2 7 0 E

INTERRUPT REQUEST					
IRQ	JP1D	JP1E	JP1F	JP1G	JP1H
2	Open	Open	Open	Open	Closed
3	Open	Open	Open	Closed	Open
4	Open	Open	Closed	Open	Open
5	Open	Closed	Open	Open	Open
7	Closed	Open	Open	Open	Open

BASE MEMORY ADDRESS & BOOT ROM ADDRESS						
Base Address	Boot ROM Address	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5
¡D0000 - D07FFh	D2000 - D3FFFh	On	Off	Off	On	On
C0000 - C07FFh	C2000 - C3FFFh	On	On	On	On	On
C0800 - C0FFFh	C2000 - C3FFFh	On	On	On	On	Off
C1000 - C17FFh	C2000 - C3FFFh	On	On	On	Off	On
C1800 - C1FFFh	C2000 - C3FFFh	On	On	On	Off	Off
C4000 - C47FFh	C6000 - C7FFFh	On	On	Off	On	On
C4800 - C4FFFh	C6000 - C7FFFh	On	On	Off	On	Off
C5000 - C57FFh	C6000 - C7FFFh	On	On	Off	Off	On
C5800 - C5FFFh	C6000 - C7FFFh	On	On	Off	Off	Off
CC000 - CC7FFh	CE000 - CFFFFh	On	Off	On	On	On
CC800 - CCFFFh	CE000 - CFFFFh	On	Off	On	On	Off
CD000 - CD7FFh	CE000 - CFFFFh	On	Off	On	Off	On
CD800 - CDFFFh	CE000 - CFFFFh	On	Off	On	Off	Off
D0800 - D0FFFh	D2000 - D3FFFh	On	Off	Off	On	Off
D1000 - D17FFh	D2000 - D3FFFh	On	Off	Off	Off	On
D1800 - D1FFFh	D2000 - D3FFFh	On	Off	Off	Off	Off
D4000 - D47FFh	D6000 - D7FFFh	Off	On	On	On	On
D4800 - D4FFFh	D6000 - D7FFFh	Off	On	On	On	Off
D5000 - D57FFh	D6000 - D7FFFh	Off	On	On	Off	On
D5800 - D5FFFh	D6000 - D7FFFh	Off	On	On	Off	Off
D8000 - D87FFh	DA000 - DBFFFh	Off	On	Off	On	On
D8800 - D8FFFh	DA000 - DBFFFh	Off	On	Off	On	Off
D9000 - D97FFh	DA000 - DBFFFh	Off	On	Off	Off	On
D9800 - D9FFFh	DA000 - DBFFFh	Off	On	Off	Off	Off
DC000 - DC7FFh	DE000 - DFFFFh	Off	Off	On	On	On
DC800 - DCFFFh	DE000 - DFFFFh	Off	Off	On	On	Off
DD000 - DD7FFh	DE000 - DFFFFh	Off	Off	On	Off	On
DD800 - DDFFFh	DE000 - DFFFFh	Off	Off	On	Off	Off
E0000 - E07FFh	E2000 - E2FFFh	Off	Off	Off	On	On
E0800 - E0FFFh	E2000 - E2FFFh	Off	Off	Off	On	Off
E1000 - E17FFh	E2000 - E2FFFh	Off	Off	Off	Off	On
E1800 - E1FFFh	E2000 - E2FFFh	Off	Off	Off	Off	Off

STANDARD MICROSYSTEMS CORPORATION
A R C n e t   P C 2 7 0 E

RESPONSE AND RECONFIGURATION TIMEOUTS				
Response Time	Idle Time	Reconfig. Time	JP1A	JP1B
í78µs	86µs	840µs	Closed	Closed
285µs	316µs	1680µs	Open	Closed
563µs	624µs	1680µs	Closed	Open
1190µs	1237µs	1680µs	Open	Open

BOOT ROM	
Setting	JP1C
íDisabled	Open
Enabled	Closed

I/O BASE ADDRESS			
Address	SW1/1	SW1/2	SW1/3
260h	On	On	On
290h	On	On	Off
2E0h	On	Off	On
2F0h	On	Off	Off
300h	Off	On	On
350h	Off	On	Off
380h	Off	Off	On
3E0h	Off	Off	Off

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Red	On/Blinking	Data is being transmitted or receiving
LED1	Red	Off	Data is not being transmitted or receiving
LED2	Green	On	Card is configured correctly
LED2	Green	Blinking	Card is reconfiguring
LED2	Green	Off	Card is defective or not configured correctly