
## ZOLTRIX, INC. FM-336I

Card Type Chip Set I/O Options Maximum Modem Rate Maximum Fax Rate Data Modulation Protocol

Fax Modulation Protocol Error Correction/Compression Fax Class Data Bus Card Size Modem, Fax Rockwell Line in (RJ-11), line out (RJ-11) 33.6Kbps 14.4Kbps Bell 103A/212A ITU-T V.21, V.22, V.22bis, V.32, V.32bis, V.34, V.34+ Rockwell V.FC ITU-T V.17, V.27ter, V.29 MNP4, MNP5, V.42, V.42bis Class I & II 8-bit ISA Half-length, half-height card

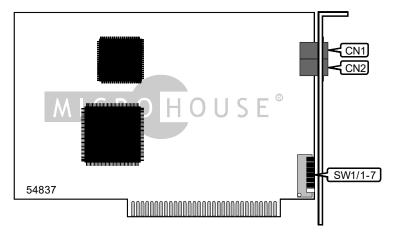

|          | CONNEC | TIONS    |       |
|----------|--------|----------|-------|
| Function | Label  | Function | Label |
| Line out | CN1 I  | Line in  | CN2   |

| SERIAL PORT ADDRESS |       |       |  |  |
|---------------------|-------|-------|--|--|
| Setting             | SW1/5 | SW1/6 |  |  |
| COM1 (3F8h)         | On    | On    |  |  |
| í COM2 (2F8h)       | Off   | On    |  |  |
| COM3 (3E8h)         | On    | Off   |  |  |
| COM4 (2E8h)         | Off   | Off   |  |  |

|     |       | INTERRUPT | <b>SETTINGS</b> |       |       |
|-----|-------|-----------|-----------------|-------|-------|
| IRQ | SW1/1 | SW1/2     | SW1/3           | SW1/4 | SW1/7 |
| 2   | Off   | Off       | Off             | Off   | On    |
| í 3 | Off   | Off       | Off             | On    | Off   |
| 4   | Off   | Off       | On              | Off   | Off   |
| 5   | Off   | Ön        | Off             | Off   | Off   |
| 7   | On    | Off       | Off             | Off   | Off   |

Continued on next page...

...continued from previous page

| SUPPORTED COMMAND SET  |  |  |  |  |
|--|--|--|--|--|
| Basic AT Commands  |  |  |  |  |
| AT, '+++', A/  |  |  |  |  |
| A, B, C, D, E, F, H, I, L, M, N, O, P, Q, T, V, W, X, Y, Z                                     |  |  |  |  |
| &C, &D, &F, &G, &J, &K, &L, &M, &P, &Q, &R, &S, &T, &V, &W, &X, &Y, &Z                         |  |  |  |  |
| Extended AT Commands   |  |  |  |  |
| \A, \B, \G, \K, \L, \N   |  |  |  |  |
| %C, %E, %L, %Q   |  |  |  |  |
| S Registers  |  |  |  |  |
| S0, S1, S2, S3, S4, S5, S6, S7, S8, S9, S10, S11, S12, S14, S16, S18, S21, S22, S23, S25, S26, |  |  |  |  |
| S27, S29, S30, S32, S33, S36, S37, S38, S40, S41, S46, S48, S82, S86, S95                      |  |  |  |  |
| Special Commands   |  |  |  |  |
| +MS  |  |  |  |  |
| Note: See MHI Help File for full command documentation.  |  |  |  |  |