


STANDARD MICROSYSTEMS CORPORATION
 ARCNET PC120
 EAGLE TECHNOLOGIES
 RX-NET II

NIC Type ARCnet
Transfer Rate 2.5Mbps
Data Bus 8-bit ISA
Topology Star
Wiring Type RG-62A/U 93ohm coaxial
Boot ROM Available

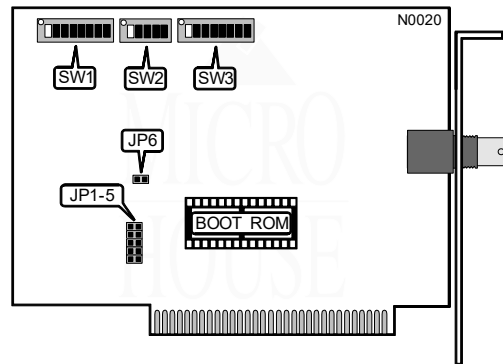

NODE ADDRESS SELECTION								
Node	SW3/1	SW3/2	SW3/3	SW3/4	SW3/5	SW3/6	SW3/7	SW3/8
0	-	-	-	-	-	-	-	-
1	Off	On	On	On	On	On	On	On
2	On	Off	On	On	On	On	On	On
3	Off	Off	On	On	On	On	On	On
4	On	On	Off	On	On	On	On	On
251	Off	Off	On	Off	Off	Off	Off	Off
252	On	On	Off	Off	Off	Off	Off	Off
253	Off	On	Off	Off	Off	Off	Off	Off
254	On	Off	Off	Off	Off	Off	Off	Off
255	Off	Off	Off	Off	Off	Off	Off	Off

Note: Node address 0 is used for messaging between nodes and must not be used.
 A total of 255 node address settings are available. The switches are a binary representation of the decimal node addresses. Switch 1 is the Least Significant Bit and switch 8 is the Most Significant Bit. The switches have the following decimal values: switch 1=1, 2=2, 3=4, 4=8, 5=16, 6=32, 7=64, 8=128. Turn off the switches and add the values of the off switches to obtain the correct node address. (On=0, Off=1)

Continued on next page . . .

STANDARD MICROSYSTEMS CORPORATION

ARCNET PC120

EAGLE TECHNOLOGIES

RX-NET II

... continued from previous page

INTERRUPT REQUEST SELECTION					
IRQ	JP1	JP2	JP3	JP4	JP5
2	Closed	Open	Open	Open	Open
3	Open	Closed	Open	Open	Open
4	Open	Open	Closed	Open	Open
5	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Closed

I/O BASE ADDRESS SELECTION						
Address	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6
200h	Off	On	On	On	On	On
250h	Off	On	On	Off	On	Off
2A0h	Off	On	Off	On	Off	On
2E0h	Off	On	Off	Off	Off	On
2F0h	Off	On	Off	Off	Off	Off
300h	Off	Off	On	On	On	On
350h	Off	Off	On	Off	On	Off
3E0h	Off	Off	Off	Off	Off	Off

BUFFER ADDRESS SELECTION						
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6
C0000h	Off	Off	On	On	On	On
C4000h	Off	Off	On	On	On	Off
C8000h	Off	Off	On	On	On	On
CC000h	Off	Off	On	On	Off	Off
D0000h	Off	Off	On	Off	On	On
D4000h	Off	Off	On	Off	On	On
D8000h	Off	Off	On	Off	Off	On
DC000h	Off	Off	On	Off	Off	Off
E0000h	Off	Off	Off	On	On	On

FACTORY CONFIGURED SETTINGS	
Switch	Setting
SW1/7	On
SW1/8	On